Replacing handle for Servo (70127) LC69

1. Dismount handle (70128)
2. Clean handle








3. Take off mounts (70077)
4. Clean mounts (70077)

5. Clean gear
with brake-cleaner



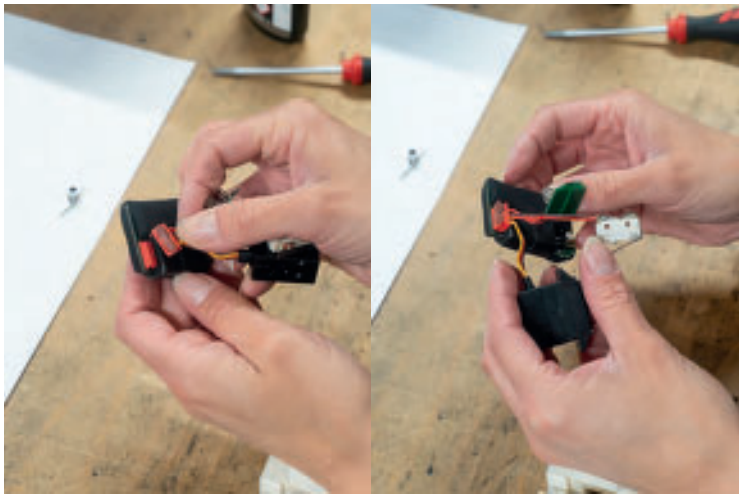

6. Connect servo (70127) to board

Replacing handle for Servo (70127) LC69


7. Connect jumper to board





8. Hold battery to battery contacts
and wait for the orange light


9. Release with RED BUTTON

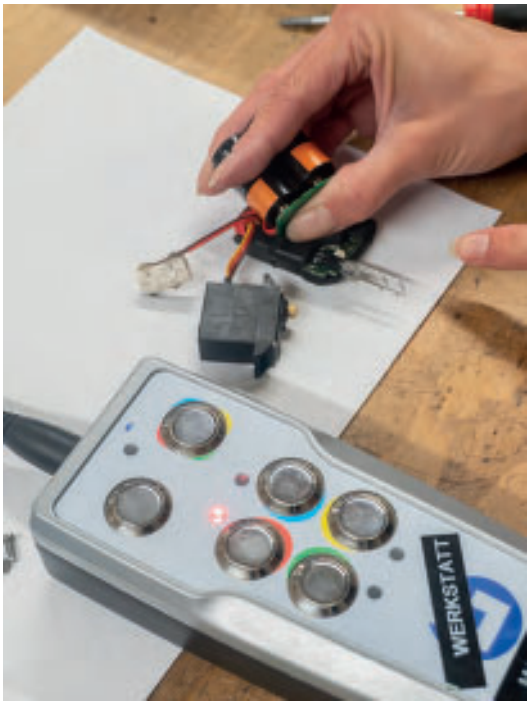

Replacing handle for Servo (70127) LC69

10. Remove jumper from board
11. Press RELEASE + ALL COLOUR BUTTON
    - The servo should move three times = 0 positioning
12. Separate board from servo (70128)

13. Insert servo (70128) into mould you received from us

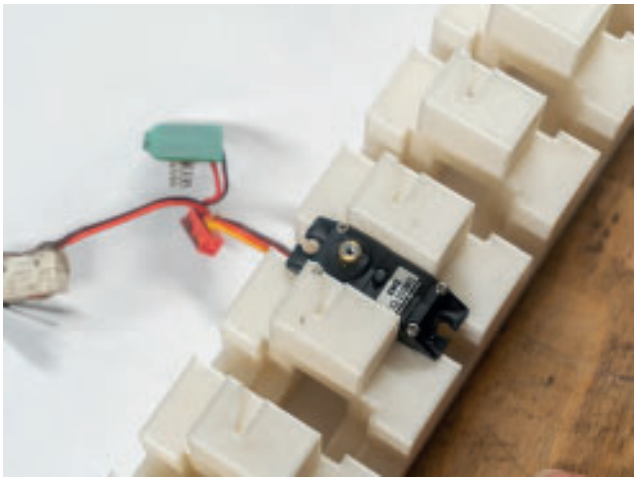






14. Drip Staloc 6S38 into the thread of the handle


15. Put the handle on the gear
    as indicated by the mould

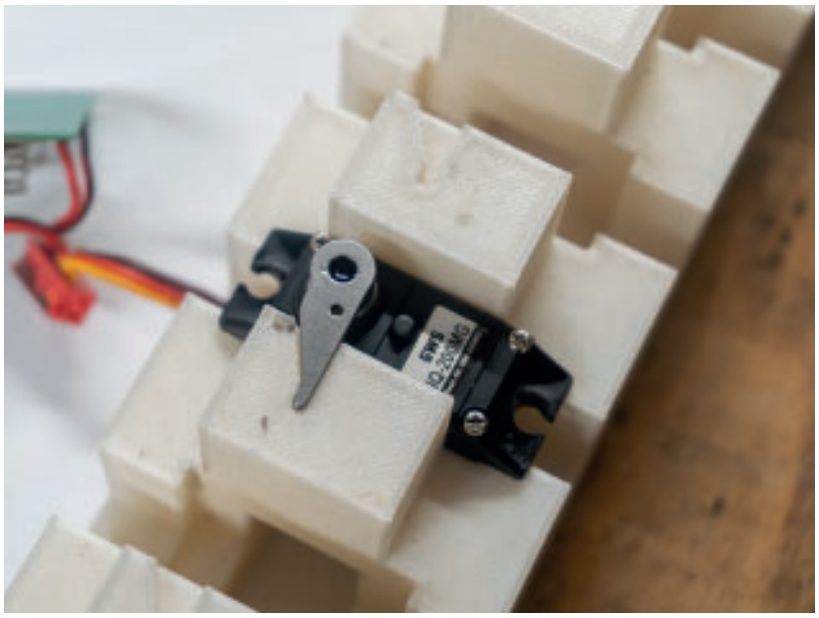

Replacing handle for Servo (70127) LC69

16. Screw the flag to the servo (70128) using the washer (71844) and the handle screw (70129)
    - Attention: let dry well



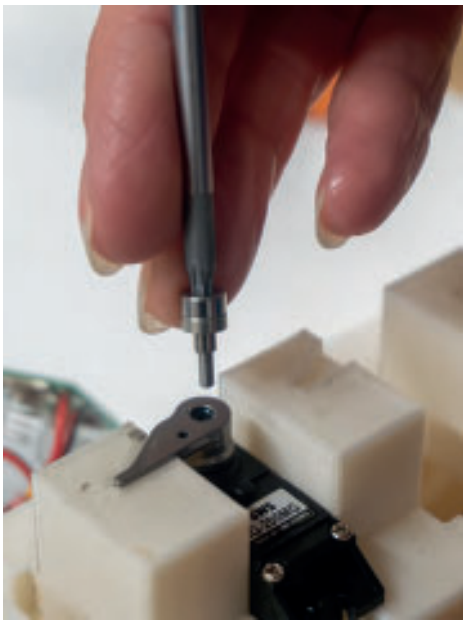

17. Drop Staloc 2S70 into the thread of the mount (70077)





Replacing handle for Servo (70127) LC69

18. Screw mount (70077) to the servo using the metal plate (70447) and the screw (70453)
    - Attention: let dry well





